



The lock & Unlock button is only used to lock the electric motor, you can still ride the bike so don't forget to get a physical lock.

The beeping button helps you to find the bike. When you press the bike will start beeping and press it again to stop.

You can always use your key to start the motor, or you can use the power button as well. Press it to start the motor, the led screen should work, it means it's started. When you want to turn off the motor, press the lock/unlock motor button.



There are two buttons and one switch located on the left-hand side handle. Two buttons are for the LED light and horn and a switch is for the max speed. For the speed switch, there are three different settings, 1 is the ECO & 3 is the fastest. Depending on which one is chosen this will limit the max speed on the bike when using the throttle.



If the front bar is too tight/loose to fold, you can adjust the folding mechanism by loosening the screw as shown in the first picture and adjust the screw in the second picture. After it's been adjusted, you can tighten the screw in the first picture.



The foot pedals can be installed by just tightening the foot pedal to the direction shown.



To fold the bike, put it into the first Position as shown in the first image, and then push it in the Direction shown, then fold the front bar to the side.



To fold the bike in half, put it into the first picture's position, then lift it up to the arrow direction, then fold the entire bike.